


RECEIVER MODE CONTROL SETUP

5.8GHz Wireless Outdoor Camera Model Number: ASC-4220

The receiver supports up to 4 cameras at the same time. You can adjust the mode control to set the working status as below. The mode control is superior to any other switch.

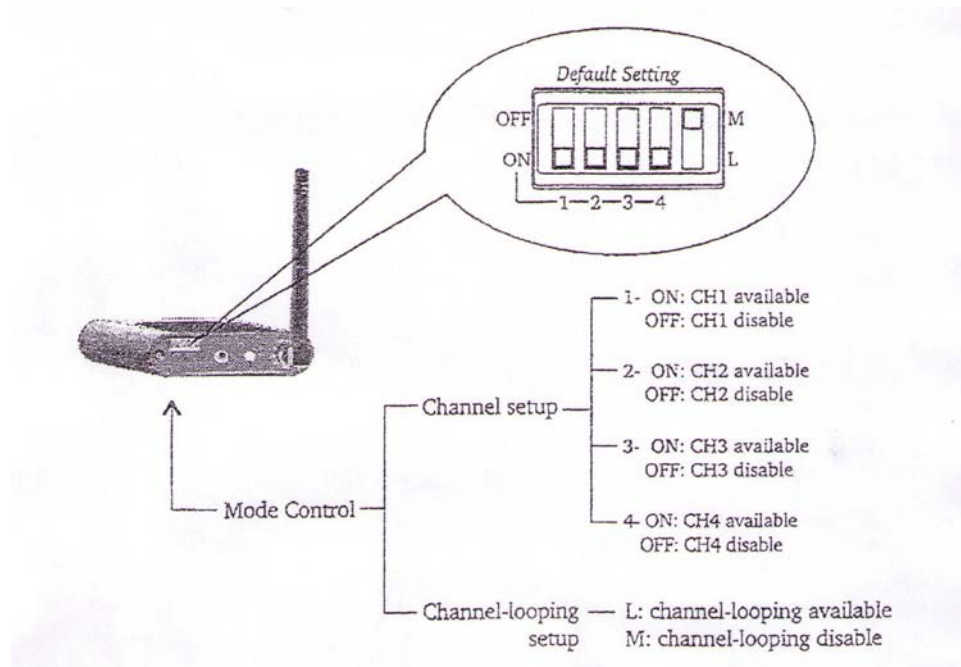

Channel Setup

You could slide channel switch 1, 2, 3, 4 to **ON** or **OFF** to enable or disable the channel(s). When one channel is disabled, it will not be selected anymore if you press the channel button; however, when enabled, it is allowed to selected.

Channel-looping Setup

You could slide channel-looping switch to **L** or **M** to enable or disable the channel-looping function. When the function is disabled, the channels cannot be looped; however, when enabled, the channel is allowed to be looped and shown on the monitor/TV one by one every 5 seconds.