

RF-Link™

INSTALLATION GUIDE

Model: APT-2000

PC-to-TV CONVERTER



RF-Link/Araneus USA, Inc.
44845 Industrial Drive
Fremont, CA 94538 U.S.A.

Tel: 510-413-5885
Fax: 510-651-5995
www.rflinkusa.com

Contents

1. Package Content
2. Panel Control and Function
3. Setup Guide
4. Important Safety Information

Note:

Please power off both your PC and APT-2000 prior to setup.

General Specification:

Power	
Input Voltage	DC 5V \pm 0.1V
Power consumption	450mA, (max)
Operation temperature & humidity	0°C ~ +50°C less than 85%
Storage temperature & humidity	-20°C ~ +70°C less than 90%

Supported display graphics :

		56Hz	60Hz	72Hz	75Hz	85Hz
		IBM PC	640X480	X	O	O
	800X600	O	O	O	O	O
	1024X768	X	O	O	X	X
MAC			66Hz		75Hz	
	640X480		O		X	
	832X624		X		O	

1. Package Content

Please make sure all accessories shown as below are enclosed, please contact your dealer for any missing part.

1. APT-2000 Unit x 1



2. Audio Adapter Cable x 1



3. USB to DC Plug Cable x 1



4. Video RCA Cable x 1



5. S-Video Cable x 1



6. VGA Cable x 1



7. Accessories

USA Standard

- (1) Power Adapter (120V) x 1



- (2) 3.5mm Stereo Jack to 2.5mm Stereo Plug x 1



European Standard:


- (1) Power Adapter (230V) x 1
Stereo Plug x 1



- (2) 3.5mm Stereo Jack To 2.5mm Stereo Plug x 1




2. Panel Control and Function

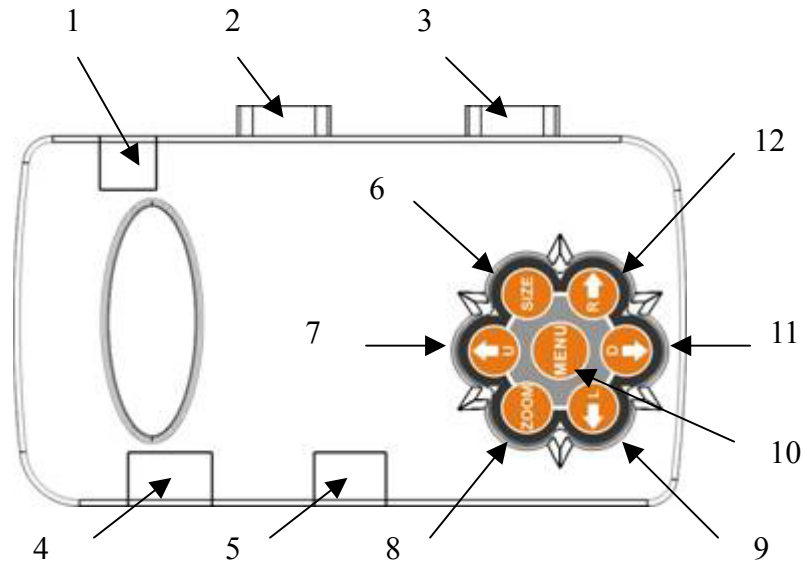

- 1 –DC IN : DC power input.
- 2 –VGA OUT : D-SUB Jack, output to PC monitor.
- 3 –VGA IN : D-SUB Jack, input from source PC.
- 4 –S-VIDEO : S-Video Jack, output to AV Equipment.
- 5 –VIDEO OUT : Video Jack, output to AV Equipment.
- 6 –SIZE : Automatically fine tune the image and locate it at central point.
- 7 –UP : .Up position control or increment function
- 8 –ZOOM : ZOOM and UN-ZOOM
- 9 –LEFT : .Left position control
- 10 –MENU : ON/OFF OSD menu
- 11 –DOWN : Down position or decrement function
- 12 –RIGHT : Right position control

3. Setup Guide

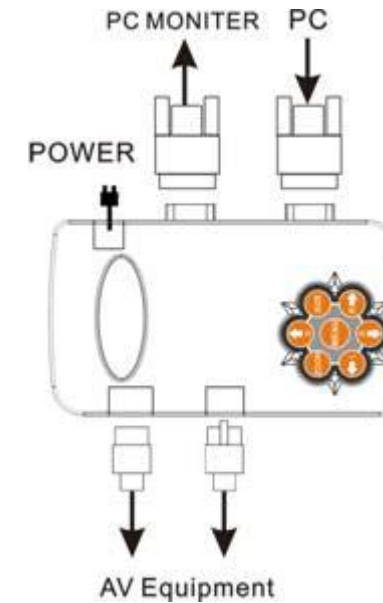

1. Please power off both PC and APT-2000 prior to set up.
2. Connect either RCA cable to “Video-IN” port (yellow) or S-Video Cable to “S-Video” port on TV and connect the other end of either cable to APT-2000.
(APT-2000 not only support from PC to TV directly, but also work with RF-Link’s AVS-5811 to send AV signal wirelessly to any TV at home)
3. Connect VGA cable to “VGA-OUT” port on PC and the other end to “VGA IN” port on APT-2000.
4. Connect PC monitor to “VGA-OUT” on APT-2000.
5. Plug in power adapter to “DC-IN” port on APT-2000 and the other end into a power outlet.

The second power source can also be obtained by connecting an “USB to DC Plug Cable” to “DC-IN” port on APT-2000 and the USB port on PC.

6. Turn on PC power.
7. Push “MENU” button on top of APT-2000, the screen will show the OSD FUNCTION MENU below (If adjusting the image quality is desired).



7.1 OSD FUNCTION MENU INSTRUCTION

- HSIZE** : To adjust the width of screen
- VSIZE** : To adjust the height of screen
- BRIGHTNESS** : To adjust the brightness of screen
- CONTRAST** : To adjust the contrast of screen
- HUE** : To adjust the hue of screen
- STURATION** : To adjust the saturation of screen
- FLICK** : To adjust the twinkle of screen
- SHARPNESS** : To adjust the sharpness of screen
- OSD BACKGROUND** : To change the color of OSD background

4. Important Safety Information

To prevent fire or shock hazard, do not expose this product to rain and moisture. For example: do not use near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or nearby a swimming pool. To avoid electric shock, do not take apart this product, provided as an accessory. This product should be operated only under power supply. Do not overload wall outlets and extension outlets as this can result in the risk of fire or electric shock.

□ **NOTE:**

This equipment has been tested and found to comply with the limits regulated by FCC and CE. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. The change or modifications no expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user’s authority to operate the device.